



SECTION "A-A"

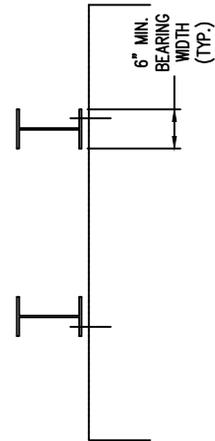

END ELEVATION

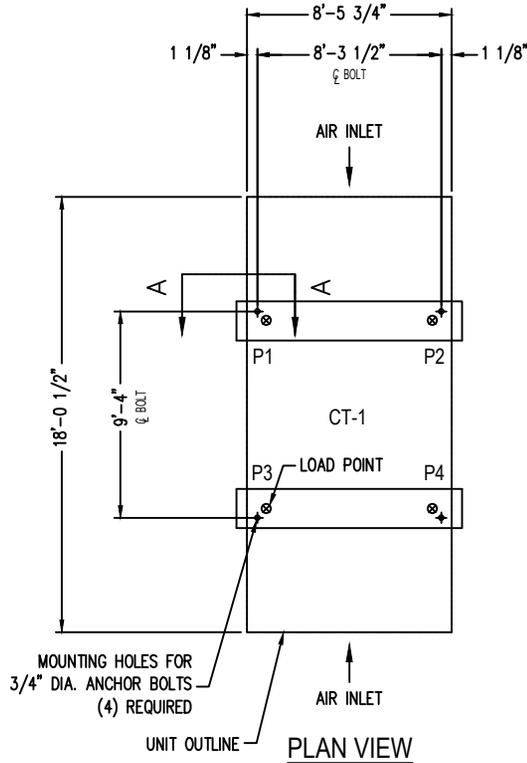

PLAN VIEW

Notes

- 1) Drawings are not to scale. All dimensions are in feet and inches. Weights are in pounds and include options and accessories.
- 2) Operating weight and weight loading are for units with water level in basin at overflow.
- 3) Unit support beams and anchor bolts to be designed and furnished by others.
- 4) Support beams must be flush and level at top.
- 5) Steel frame members perpendicular to the support beams and under the air inlet edges of unit must be at least 2" below the top of the support beams.

MODEL NO.	SHIPPING WEIGHT	OPERATING WEIGHT	POINT "1"	POINT "2"	POINT "3"	POINT "4"
S5E-8518-07J	10840	20090	5023	5023	5023	5023
S5E-8518-07K	10850	20100	5025	5025	5025	5025
S5E-8518-07L	10920	20170	5043	5043	5043	5043
S5E-8518-07M	10940	20190	5048	5048	5048	5048
S5E-8518-07N	10970	20220	5055	5055	5055	5055

ORDER NO:

DATE:



BALTIMORE AIRCOIL COMPANY

**5000E Unit Support
Standard Basins**

DRAWING NUMBER:

8518-07