



SECTION "A-A"

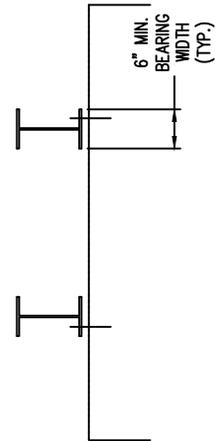

END ELEVATION

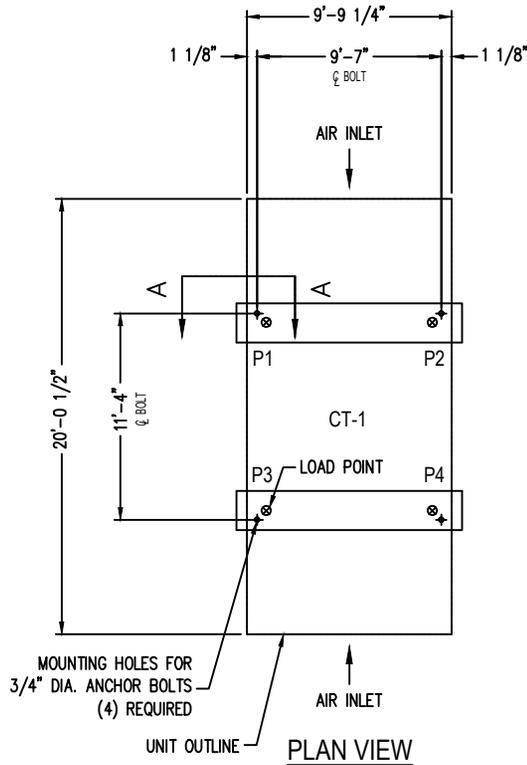

PLAN VIEW

Notes

- 1) Drawings are not to scale. All dimensions are in feet and inches. Weights are in pounds and include options and accessories.
- 2) Operating weight and weight loading are for units with water level in basin at overflow.
- 3) Unit support beams and anchor bolts to be designed and furnished by others.
- 4) Support beams must be flush and level at top.
- 5) Steel frame members perpendicular to the support beams and under the air inlet edges of unit must be at least 2" below the top of the support beams.

MODEL NO.	SHIPPING WEIGHT	OPERATING WEIGHT	POINT "1"	POINT "2"	POINT "3"	POINT "4"
S5E-1020-07K	12200	22550	5638	5638	5638	5638
S5E-1020-07L	12270	22620	5655	5655	5655	5655
S5E-1020-07M	12290	22640	5660	5660	5660	5660
S5E-1020-07N	12430	22780	5695	5695	5695	5695
S5E-1020-07O	12480	22830	5708	5708	5708	5708
S5E-1020-07P	12640	22990	5748	5748	5748	5748

ORDER NO:

DATE:



BALTIMORE AIRCOIL COMPANY

**5000E Unit Support
Standard Basins**

DRAWING NUMBER:
1020-07