



Model: ______

1 Coils

2 Fans with Integrated EC Motor Kit

3 Adiabatic Pre-Cooler Pads

4 Water Distribution Inspection Cover

5 Upper Water Distribution System

6 Plenum Access (on opposite face, not shown)

7 Pressure Reducing Valve

8 Make Up Valve

9 Constant Flow Valve

10 Integrated Control Panel

11 Lower Water Collection Channel

12 Sump Access Door

13 Sump Strainer (if equipped)

14 Drain Valve Access Cover

15 Recirculation Pump

16 Float Switch (if equipped)

17 Drain Valve

18 Overflow

19 Radar Sensor (if equipped)



Reduce Downtime

Spare Parts List (page 2)

©2024 Baltimore Aircoil Company PMTrilliumTRF/20240531 Quantities may vary according to the unit.

Recommended Spare Parts

BAC Factory Authorized Parts are manufactured to meet rigorous specifications and are guaranteed to fit your unit and perform as original equipment.

BAC Factory Authorized Parts can be ordered through your local BAC Representative. Most BAC Representatives maintain a local inventory of commonly used parts. For a free unit inspection and a specific parts list for your serial number, contact your local BAC Representative today.

Even with BAC's fast delivery capability, it is still recommended that certain essential and emergency repair part be maintained in your inventory to minimize any potential downtime.



Find my BAC Rep to order parts, get maintenance tips, and get a free unit inspection: www.baltimoreaircoil.com/RepFinder



Basic Recommended Spare Parts

Recirculation Pump

Float Switch

Make-up Value

Pressure Reducing Value

Drain Value

Strainer

Parts to Consider if Extended Downtime is a Concern

Adiabatic Pre-Cooler Pad Kit

Fan with Integrated EC Motor Kit



