

NOTES:

- 1. All dimensions are in feet and inches.
- 2. Supporting steelwork and anchor bolts to be designed and furnished by others.
- 3. All supporting steelwork must be flush and level at top, and designed in accordance with accepted structural practice.
- 4. Each support beam should be designed, as a minimum, for 80% of the total unit operating weight applied as a uniformly
- distributed load. Refer to the Tabulated Unit Print for operating weights.
- 5. Supporting steelwork shall be greater than or equal to the length of the unit.
- 6. Do not use this drawing to size point vibration isolators. Contact your local BAC Representative for details.

CXVB Evaporative Condenser Plan "A" Steel Support Print

BALTIMORE AIRCOIL COMPANY